


E Series Troubleshooting & Maintenance

Screen Check Valve

Using a container, submerge the Screen Check Valve in warm water with a drop of soap at the end of the day. Let the Check Valve sit overnight then use a toothbrush to remove any remaining residue attached to the screen before reinstalling in your applicator.

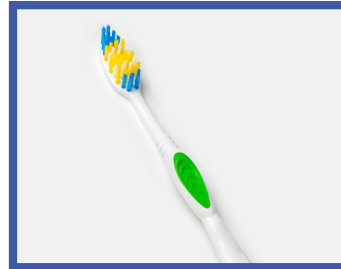

Battery Charger

Improper placement of the battery can result in a false positive charge, where the charger indicator lights will react correctly, but the battery has not charged. To ensure that the battery is installed correctly, the battery's bottom red tab should not be visible.



Applicator Tank Filter

Always use the included tank filter for pouring diluted solutions as a measure to sift out any particles that did not mix well.



Telescoping Wand

After installing the wand onto the trigger gun by hand, you may further secure the connection with a 1/8 turn of a wrench. Tighten the extension nut by hand in a clockwise direction. To change the direction of spray tip, rotate the wand extension piece in a clockwise direction as to not loosen the extension nut.

