

Power Cart Troubleshooting


NOT OPERATIONAL OR NO AIR PRESSURE

1 Decontaminate & rinse tank with water.

2 Remove the hand pump and connect the yellow hose from the compressor to the fitting labelled "Air Inlet". Turn the power switch on, the compressor should start running. You should hear air entering the tank.



3 Unthread the yellow hose from the compressor. Turn the compressor on, you should feel air coming out of the stem.

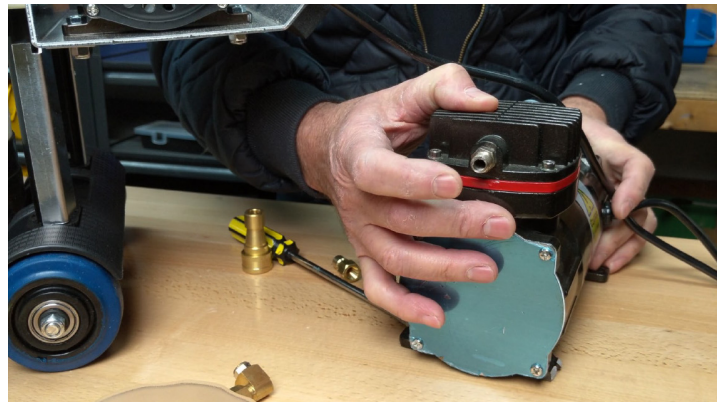

Are Quick Couplers Operational?

- 4** Take a screwdriver and push both the male and female QD's inwards. They should both move in and out.




- 5** Spray WD-40 into the yellow compressor hose, from the threaded end. Let it drip down to the clear check valve at the center of the hose. This will free up debris.




Compressor Cylinder Head Inspection

- 6** Use a #3 Allen Key to remove the Compressor Head Screws. Remove the compressor head and make sure that the black rubber check valve is in good standing.

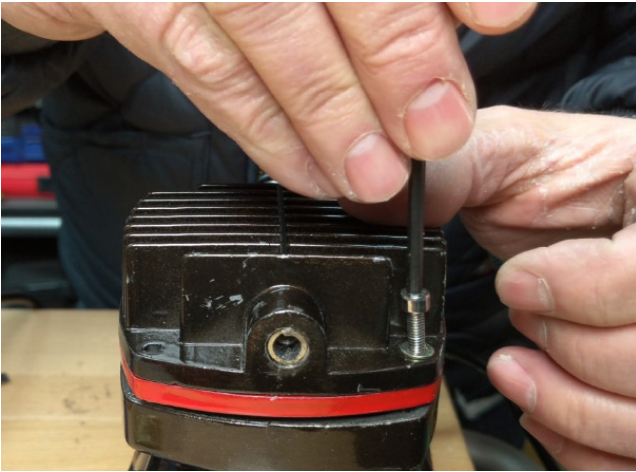

- 7** Remove the red plate and inspect the Reed Valve.

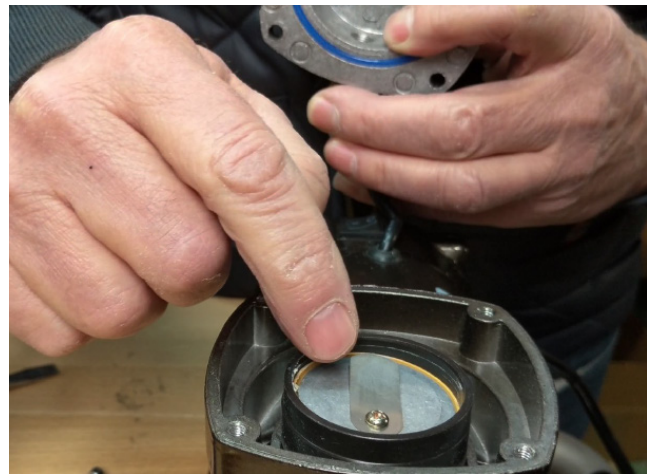

Once you locate your compressor issue, or if your issue cannot be diagnosed. Please contact us via email or telephone so that we may ship you the correct parts or offer further assistance.